

# AssayMax™ Mouse TNF-alpha ELISA Kit

Assaypro LLC 3400 Harry S Truman Blvd St. Charles, MO 63301 T (636) 447-9175 F (636) 395-7419 www.assaypro.com

For any questions regarding troubleshooting or performing the assay, please contact our support team at support@assaypro.com.

Thank you for choosing Assaypro.

## **Assay Summary**

**Step 1**. Add 50  $\mu$ l of Standard or Sample per well. Incubate 2 hours.

**Step 2.** Wash, then add 50  $\mu l$  of Biotinylated Antibody per well. Incubate 2 hours.

**Step 3**. Wash, then add 50  $\mu$ l of SP Conjugate per well. Incubate 30 minutes.

**Step 4.** Wash, then add 50  $\mu$ l of Chromogen Substrate per well. Incubate 20 minutes.

**Step 5.** Add 50  $\mu$ l of Stop Solution per well. Read at 450 nm immediately.

## Symbol Key

Consult instructions for use.

## Assay Template

12								
11								
10								
6								
∞								
7								
9								
ß								
4								
æ								
2								
1								
	A	B	С	D	Е	Ŀ	Ð	т

## AssayMax<sup>™</sup> Mouse TNF-alpha ELISA Kit

Catalog No. EMT2010-1 Sample insert for reference use only

#### Introduction

Tumor necrosis factor alpha (TNF-alpha, cachectin) is a potent cytokine with a myriad of innate immune anti-tumor properties. TNF-alpha has a critical role in bone and cartilage damage associated with rheumatoid arthritis (RA) [1]. Research indicates that TNF-alpha may be involved in the pathogenesis and/or progression of gestational diabetes mellitus (GDM) [2]. TNF-alpha is expressed in myocardium during compensated pressure overload hypertrophy and contributes to postischemic myocardial dysfunction (3). The serum levels of TNF-alpha have also been shown to be significantly elevated in active Wegener's granulomatosis (WG) [4], in the late stages of HIV-associated disease (5), and in the spinal cord of arthritic patients (6).

#### **Principle of the Assay**

The AssayMax<sup>™</sup> Mouse TNF-alpha ELISA (Enzyme-Linked Immunosorbent Assay) Kit is designed for detection of TNF-alpha in mouse **plasma, serum, cell culture supernatant, cell lysate, and tissue samples**. This assay employs a quantitative **sandwich enzyme immunoassay** technique that measures mouse TNF-alpha in approximately 5 hours. A polyclonal antibody specific for mouse TNF-alpha has been pre-coated onto a 96-well microplate with removable strips. TNF-alpha in standards and samples is sandwiched by the immobilized antibody and a biotinylated polyclonal antibody specific for mouse TNF-alpha, which is recognized by a streptavidin-peroxidase (SP) conjugate. All unbound material is washed away and a peroxidase enzyme substrate is added. The color development is stopped and the intensity of the color is measured.

#### **Caution and Warning**

- This product is for **Research Use Only** and is not intended for use in diagnostic procedures.
- Prepare all reagents (diluent buffer, wash buffer, standard, biotinylated antibody, and SP conjugate), as instructed, prior to running the assay.
- Prepare all samples prior to running the assay. The dilution factors for the samples are suggested in this insert. However, the user should determine the optimal dilution factor.
- Spin down the SP conjugate vial, the biotinylated antibody vial, and the standard diluent vial before opening and using contents.

- The Stop Solution is an acidic solution.
- The kit should not be used beyond the expiration date.

#### Reagents

- Mouse TNF-alpha Microplate: A 96-well polystyrene microplate (12 strips of 8 wells) coated with a polyclonal antibody against mouse TNF-alpha.
- **Sealing Tapes:** Each kit contains 3 precut, pressure sensitive sealing tapes that can be cut to fit the format of the individual assay.
- Mouse TNF-alpha Standard: Mouse TNF-alpha in a buffered protein base (2000 pg, lyophilized).
- **Biotinylated Mouse TNF-alpha Antibody (50x):** A 50-fold concentrated biotinylated polyclonal antibody against mouse TNF-alpha (120 μl).
- MIX Diluent Concentrate (10x): A 10-fold concentrated buffered protein base (30 ml).
- Standard Diluent (1x): A buffered protein base with stabilizer (2 ml).
- Wash Buffer Concentrate (20x): A 20-fold concentrated buffered surfactant (30 ml, 2 bottles).
- SP Conjugate (100x): A 100-fold concentrate (80 µl).
- **Chromogen Substrate (1x):** A stabilized peroxidase chromogen substrate tetramethylbenzidine (7 ml).
- Stop Solution (1x): A 0.5 N hydrochloric acid solution to stop the chromogen substrate reaction (11 ml).

#### **Storage Condition**

- Upon arrival, immediately store components of the kit at recommended temperatures up to the expiration date.
- Store Standard, SP Conjugate, and Biotinylated Antibody at -20°C.
- Store Microplate, Diluent Concentrate (10x), Standard Diluent (1x), Wash Buffer, Stop Solution, and Chromogen Substrate at 2-8°C.
- Unused microplate wells may be returned to the foil pouch with the desiccant packs and resealed. May be stored for up to 30 days in a vacuum desiccator.

#### **Other Supplies Required**

- Microplate reader capable of measuring absorbance at 450 nm
- Pipettes (1-20 µl, 20-200 µl, 200-1000 µl, and multiple channel)
- Deionized or distilled reagent grade water

#### Sample Collection, Preparation, and Storage

- Plasma: Collect plasma using one-tenth volume of 0.1 M sodium citrate as an anticoagulant. Centrifuge samples at 3000 x g for 10 minutes and collect plasma. The sample is suggested for use at 1x; however, user should determine optimal dilution factor depending on application needs. The undiluted samples can be stored at -20°C or below for up to 3 months. Avoid repeated freeze-thaw cycles.
- Serum: Samples should be collected into a serum separator tube. After clot formation, centrifuge samples at 3000 x g for 10 minutes and remove serum. The sample is suggested for use at 1x; however, user should determine optimal dilution factor depending on application needs. The undiluted samples can be stored at -20°C or below for up to 3 months. Avoid repeated freeze-thaw cycles.
- **Cell Culture Supernatant:** Centrifuge cell culture media at 1500 rpm for 10 minutes at 4°C to remove debris and collect supernatant. If necessary, dilute samples into MIX Diluent; user should determine optimal dilution factor depending on application needs. The undiluted samples can be stored at -80°C. Avoid repeated freeze-thaw cycles.
- Cell Lysate: Rinse cell with cold PBS and then scrape the cell into a tube with 5 ml of cold PBS and 0.5 M EDTA. Centrifuge suspension at 1500 rpm for 10 minutes at 4°C and aspirate supernatant. Resuspend pellet in ice-cold Lysis Buffer (PBS, 1% Triton X-100, protease inhibitor cocktail). For every 1 x 10<sup>6</sup> cells, add approximately 100 µl of ice-cold Lysis Buffer. Incubate on ice for 60 minutes. Centrifuge at 13000 rpm for 30 minutes at 4°C and collect supernatant. If necessary, dilute samples into MIX Diluent; user should determine optimal dilution factor depending on application needs. The undiluted samples can be stored at -80°C. Avoid repeated freeze-thaw cycles.
- **Tissue:** Extract tissue samples with 0.1 M phosphate-buffered saline (pH 7.4) containing 1% Triton X-100 and centrifuge at 14000 x g for 20 minutes. Collect the supernatant and measure the protein concentration. If necessary, dilute samples into MIX Diluent; user should determine optimal dilution factor depending on application needs. Store remaining extract at -80°C. Avoid repeated freeze-thaw cycles.

Applicable samples may also include biofluids, cell culture, and tissue homogenates. If necessary, user should determine optimal dilution factor depending on application needs.

Refer to Dilution Guidelines for further instruction.

	Guidelines for Dilutions of 100-fold or Greater (for reference only; please follow the insert for specific dilution suggested)				
	100x	10000x			
A)	4 μl sample : 396 μl buffer (100x)	A)	4 μl sample : 396 μl buffer (100x)		
	= 100-fold dilution	B)	4 μl of A : 396 μl buffer (100x)		
			= 10000-fold dilution		
	Assuming the needed volume is less than		Assuming the needed volume is less than		
	or equal to 400 μl.		or equal to 400 μl.		
1000x			100000x		
A)	4 μl sample : 396 μl buffer (100x)	A)	4 μl sample : 396 μl buffer (100x)		
B)	24 μl of A : 216 μl buffer (10x)	B)	4 μl of A : 396 μl buffer (100x)		
	= 1000-fold dilution	C)	24 μl of B : 216 μl buffer (10x)		
			= 100000-fold dilution		
	Assuming the needed volume is less than		Assuming the needed volume is less than		
	or equal to 240 μl.		or equal to 240 μl.		

#### **Reagent Preparation**

- Freshly dilute all reagents and bring all reagents to room temperature before use.
- MIX Diluent Concentrate (10x): Dilute the MIX Diluent Concentrate 10fold with reagent grade water to produce a 1x solution. When diluting the concentrate, make sure to rinse the bottle thoroughly to extract any precipitates left in the bottle. Mix the 1x solution gently until the crystals have completely dissolved. Store for up to 30 days at 2-8°C.
- Mouse TNF-alpha Standard: Reconstitute the Mouse TNF-alpha Standard (2000 pg) with 0.5 ml of Standard Diluent to generate a 4000 pg/ml standard stock solution. Allow the vial to sit for 10 minutes with gentle agitation prior to making dilutions. Prepare duplicate or triplicate standard points by serially diluting from the standard stock solution (4000 pg/ml) 2-fold with equal volume of MIX Diluent to produce 2000, 1000, 500, 250, 125, 62.5, and 31.25 pg/ml solutions. MIX Diluent serves as the zero standard (0 pg/ml). Aliquot remaining stock solution to limit repeated freeze-thaw cycles. This solution should be stored at -20°C and used within 30 days.

Standard Point	Dilution	[TNF-alpha] (pg/ml)
P1	1 part Standard (4000 pg/ml) + 1 part MIX Diluent	2000
P2	1 part P1 + 1 part MIX Diluent	1000
Р3	1 part P2 + 1 part MIX Diluent	500
P4	1 part P3 + 1 part MIX Diluent	250
P5	1 part P4 + 1 part MIX Diluent	125
P6	1 part P5 + 1 part MIX Diluent	62.5
P7	1 part P6 + 1 part MIX Diluent	31.25
P8	MIX Diluent	0.0

- Biotinylated Mouse TNF-alpha Antibody (50x): Spin down the antibody briefly and dilute the desired amount of the antibody 50-fold with MIX Diluent to produce a 1x solution. The undiluted antibody should be stored at -20°C.
- Wash Buffer Concentrate (20x): Dilute the Wash Buffer Concentrate 20fold with reagent grade water to produce a 1x solution. When diluting the concentrate, make sure to rinse the bottle thoroughly to extract any precipitates left in the bottle. Mix the 1x solution gently until the crystals have completely dissolved.
- SP Conjugate (100x): Spin down the SP Conjugate briefly and dilute the desired amount of the conjugate 100-fold with MIX Diluent to produce a 1x solution. The undiluted conjugate should be stored at -20°C.

#### Assay Procedure

- Prepare all reagents, standard solutions, and samples as instructed. Bring all reagents to room temperature before use. The assay is performed at room temperature (20-25°C).
- Remove excess microplate strips from the plate frame and return them immediately to the foil pouch with desiccants inside. Reseal the pouch securely to minimize exposure to water vapor and store in a vacuum desiccator.
- Add 50 μl of Mouse TNF-alpha Standard or sample to each well. Gently tap plate to thoroughly coat the wells. Break any bubbles that may have formed. Cover wells with a sealing tape and incubate for 2 hours. Start the timer after the last addition.
- Wash the microplate manually or automatically using a microplate washer. Invert the plate and decant the contents; hit 4-5 times on absorbent material to completely remove the liquid. If washing manually, wash five times with 200 µl of Wash Buffer per well. Invert the plate each time and decant the contents; hit 4-5 times on absorbent material to completely remove the liquid. If using a microplate washer,

wash six times with 300  $\mu$ l of Wash Buffer per well; invert the plate and hit 4-5 times on absorbent material to completely remove the liquid.

- Add 50 µl of Biotinylated Mouse TNF-alpha Antibody to each well. Gently tap plate to thoroughly coat the wells. Break any bubbles that may have formed. Cover wells with a sealing tape and incubate for 2 hours.
- Wash the microplate as described above.
- Add 50 µl of SP Conjugate to each well. Gently tap plate to thoroughly coat the wells. Break any bubbles that may have formed. Cover wells with a sealing tape and incubate for 30 minutes. Turn on the microplate reader and set up the program in advance.
- Wash the microplate as described above.
- Add 50 μl of Chromogen Substrate to each well. Gently tap plate to thoroughly coat the wells. Break any bubbles that may have formed. Incubate in ambient light for 20 minutes or until the optimal blue color density develops.
- Add 50 µl of Stop Solution to each well. The color will change from blue to yellow. Gently tap plate to ensure thorough mixing. Break any bubbles that may have formed.
- Read the absorbance on a microplate reader at a wavelength of 450 nm **immediately**. If wavelength correction is available, subtract readings at 570 nm from those at 450 nm to correct optical imperfections. Otherwise, read the plate at 450 nm only. Please note that some unstable black particles may be generated at high concentration points after stopping the reaction for about 10 minutes, which will reduce the readings.

#### Data Analysis

- Calculate the mean value of the duplicate or triplicate readings for each standard and sample.
- To generate a standard curve, plot the graph using the standard concentrations on the x-axis and the corresponding mean 450 nm absorbance (OD) on the y-axis. The best fit line can be determined by regression analysis using log-log or four-parameter logistic curve fit.
- Determine the unknown sample concentration from the Standard Curve and multiply the value by the dilution factor.


#### **Typical Data**

• The typical data is provided for reference only. Individual laboratory means may vary from the values listed. Variations between laboratories may be caused by technique differences.

Standard Point	pg/ml	OD	Average OD
P1	2000	2.573	2.515
FI	2000	2.457	2.515
P2	1000	2.137	2.088
FΖ	1000	2.039	2.000
Р3	500	1.457	1.489
FD	500	1.521	1.409
P4	250	0.933	0.912
F 4		0.891	0.912
P5	125	0.509	0.524
FJ	125	0.539	0.524
P6	62.5	0.283	0.290
FU	02.5	0.297	0.290
Р7	31.25	0.141	0.145
F 7	51.25	0.149	0.145
P8	0.0	0.014	0.012
гO	0.0	0.010	0.012

#### Standard Curve

• The curve is provided for illustration only. A standard curve should be generated each time the assay is performed.

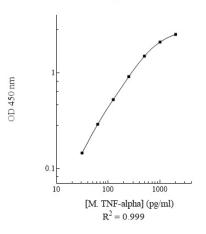

Mouse TNF-alpha Standard Curve

#### **Performance Characteristics**

- This assay recognizes both natural and recombinant mouse TNF-alpha.
- The minimum detectable dose of mouse TNF-alpha as calculated by 2SD from the mean of a zero standard was established to be 2.6 pg/ml.

- Intra-assay precision was determined by testing three plasma samples twenty times in one assay.
- Inter-assay precision was determined by testing three plasma samples in twenty assays.

	Intra-Assay Precision			Inter-Assay Precision		
Sample	1	2	3	1	2	3
n	20	20	20	20	20	20
CV (%)	4.6%	6.4%	6.1%	10.0%	11.9%	10.5%
Average CV (%)	5.7%			10.8%		

#### Recovery

Standard Added Value	31.25 – 500 pg/ml	
Recovery %	87 – 111%	
Average Recovery %	96%	

#### Troubleshooting

Issue	Causes	Course of Action		
	Use of improper components	<ul> <li>Check the expiration date listed before use.</li> <li>Do not interchange components from different lots.</li> </ul>		
-	Improper wash step	<ul> <li>Check that the correct wash buffer is being used.</li> <li>Check that all wells are empty after aspiration.</li> <li>Check that the microplate washer is dispensing properly.</li> <li>If washing by pipette, check for proper pipetting technique.</li> </ul>		
cisio	Splashing of reagents while loading wells	<ul> <li>Pipette properly in a controlled and careful manner.</li> </ul>		
Low Precision	Inconsistent volumes loaded into wells	<ul> <li>Pipette properly in a controlled and careful manner.</li> <li>Check pipette calibration.</li> <li>Check pipette for proper performance.</li> </ul>		
	Insufficient mixing of reagent dilutions	<ul> <li>Thoroughly agitate the lyophilized components after reconstitution.</li> <li>Thoroughly mix dilutions.</li> </ul>		
	Improperly sealed microplate	<ul> <li>Check the microplate pouch for proper sealing.</li> <li>Check that the microplate pouch has no punctures.</li> <li>Check that three desiccants are inside the microplate pouch prior to sealing.</li> </ul>		

a	Microplate was left unattended between	Each step of the procedure should be performed	
Unexpectedly Low or High Signal Intensity	steps	uninterrupted.	
Si	Omission of step	• Consult the provided procedure for complete list of steps.	
lg h	Steps performed in	Consult the provided procedure for complete list of steps:     Consult the provided procedure for the correct order.	
Ξ	incorrect order	• consult the provided procedure for the confect order.	
ītor	Insufficient amount of	Check pipette calibration.	
NV NSi	reagents added to wells	Check pipette for proper performance.	
ly Low ol Intensity	Wash step was skipped	Consult the provided procedure for all wash steps.	
는 b	Improper wash buffer	Check that the correct wash buffer is being used.	
te	Improper reagent	Consult reagent preparation section for the correct	
) ec	preparation	dilutions of all reagents.	
dxa	Insufficient or	Consult the provided procedure for correct incubation	
Jne	prolonged incubation	time.	
	periods		
ve Fit	Non-optimal sample dilution	<ul> <li>Sandwich ELISA: If samples generate OD values higher than the highest standard point (P1), dilute samples further and repeat the assay.</li> <li>Competitive ELISA: If samples generate OD values lower than the highest standard point (P1), dilute samples further and repeat the assay.</li> </ul>	
Deficient Standard Curve Fit		<ul> <li>User should determine the optimal dilution factor for samples.</li> </ul>	
andaı	Contamination of reagents	<ul> <li>A new tip must be used for each addition of different samples or reagents during the assay procedure.</li> </ul>	
Sta	Contents of wells	<ul> <li>Verify that the sealing film is firmly in place before placing</li> </ul>	
t	evaporate	the assay in the incubator or at room temperature.	
cie		<ul> <li>Pipette properly in a controlled and careful manner.</li> </ul>	
efi	Improper pipetting	<ul> <li>Check pipette calibration.</li> </ul>	
ă		<ul> <li>Check pipette for proper performance.</li> </ul>	
	Insufficient mixing of reagent dilutions	<ul> <li>Thoroughly agitate the lyophilized components after reconstitution.</li> <li>The result wait dilutions</li> </ul>	
	-	<ul> <li>Thoroughly mix dilutions.</li> </ul>	

#### References

- (1) Taylor PC. (2001) Mol Biotechnol. 19(2):153-68.
- (2) Coughlan MT et al. (2001) Diabet Med. 18(11):921-7.
- (3) Stamm C et al. (2001) Circulation. 104(12 Suppl 1):I350-5.
- (4) Ohta N et al. (2001) Auris Nasus Larynx. 28(4):311-4.
- (5) Caso G et al. (2001) Clin Sci (Lond). 101(6):583-9.
- (6) Nanki T et al. (2001) J Immunol. 167(9):5381-5.

Version 5.9R